It's Simple

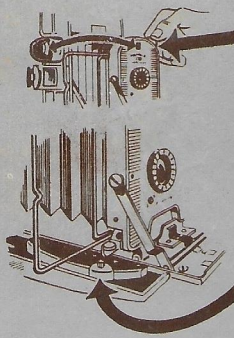

OPERATE THE CAMERA WITH THIS CARD IN PLACE UNTIL YOU LEARN THESE EASY STEPS

1 Follow the easy loading instructions printed on the film, then . . . Turn this dial to set shutter. Use chart in film box or G.E. Polaroid Meter to select number. For flash, see Instruction Book.

2 Focus by setting this lever to distance between camera and subject. Now, squeeze shutter lever s-l-o-w-l-y to snap picture.

3 Snap the film release switch. A snap in either direction releases the film.

4 Lift this cutter bar → Pull out paper tab rapidly thru slot. **(Keep slot shaded.)** Replace cutter bar and hold down to tear off paper.

WAIT 60 SECONDS.

5 Open ↑ latch and lift door. Lift out picture, starting at oval cut-out. (When camera is cold, allow longer development.)

Protect prints by coating them with Polaroid Print Coater as soon as convenient after removal from camera. Read the Instruction Book carefully to get perfect pictures every time.

Back Door Card
(Model 95A)

SANDERSON BROTHERS LITHO IN USA

F944G
8-54